

WSER Cassette Awning Motors (page 4.)

Handy Tips

1. Always roll the Awning out and in first if setting the inner limit manually. Failure to do so may result in a change of limit position due to a change in fabric tension.
2. When pressing up and down simultaneously during setup, be as precise as possible. Ideally it should sound like one button click when both are pressed.
3. If you catch yourself making an error during a setup process, stop and allow 10 seconds for the motor to time out, then try again.
4. Do not hold any buttons down during setup process unless specifically told to do so. A half second press should be plenty and allow 1 second between presses.
5. If you are using a multi-channel remote, make certain that it is on the correct channel before you assign it to a motor. This is a common mistake.

Turning the outer limit rebound On / Off

The outer limit rebound is a function that tightens the fabric once the awning has reached it's outer limit and it turned OFF as the default setting. It does this by doing small reverse rotation after the outer limit is reached. In some situations this may not be desirable.

To turn the rebound function ON:

(Press Up and Down simultaneously) + (press STOP 3 times) + (press UP once)

To turn the rebound function OFF:

(Press Up and Down simultaneously) + (press STOP 3 times) + (press DOWN once)

Note: If the inner limit is set manually, the rebound function will not work.

Manually setting the inner limit

This folding arm awning motor is designed to set it's own inner limit based on torque sensing. If you need to set an inner limit manually, it can be done using the following procedure only.

Delete outer limit first (inner limit cannot be set manually if outer limit is already set)
(Press Up and Down simultaneously) + (press STOP 4 times) + (press DOWN once)

Adjust awning to desired inner limit position and set inner limit
(Press Up and Down simultaneously) + (press STOP twice) + (press UP once)

Now adjust awning to desired outer limit position and set the limit
(Press Up and Down simultaneously) + (press STOP twice) + (press DOWN once)

Your limits are now set. Be aware that if inner limit is set manually, the motor will not rebound (self tension) at the outer limit. Deleting the outer limit will also delete the inner limit automatically. Deleting the outer limit is the only way to delete the inner limit. A manual inner limit may change position as fabric stretches over time.


WSER Cassette Awning Motors (Page 1.)

1 Technical Specifications

Power AC 240v/50Hz
Protection Index: IP 44
Loaded Power 400w


Up to 15 remotes (or channels) may be assigned to each motor
Thermal protection will engage after 4 minutes of continuous running

2 Wire Connections

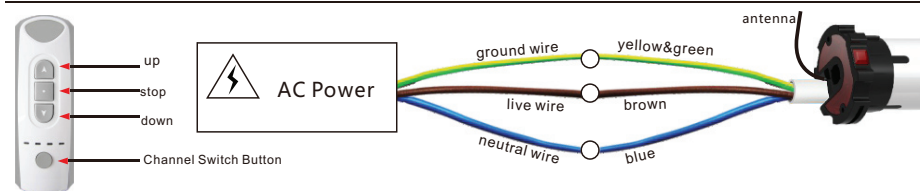

3 Assigning a remote to a motor (You have 10 seconds to complete the task)

Method A. For the first remote assigned



Turn power on, the motor will vibrate


Press the UP and DOWN buttons simultaneously, then release.

Press the STOP button once, the motor will vibrate.

You can now use the remote to control the motor.

Method A. can only be used again if you cut and restore power to the motor 3 times. You must allow 5 seconds before restoring power each time and you must allow the motor to vibrate properly each time. After the third cycle, you may assign the remote.

Method B. Can be used at any time.




Press the red button on the motor for 1 second

Press the UP and DOWN buttons simultaneously, then release.

Press the STOP button once, the motor will vibrate.

You can now use the remote to control the motor.

4 Assigning an extra remote (or channel) to a motor via the original remote

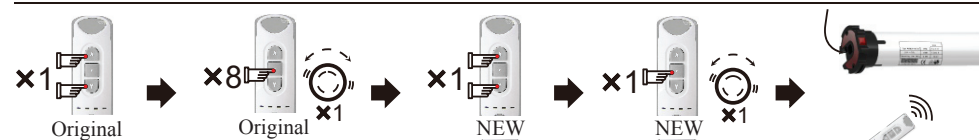

Press the UP and DOWN buttons simultaneously, then release.

Press the STOP button 8 times, the motor will vibrate.

Press the UP and DOWN buttons simultaneously, then release.

Press the STOP button once, the motor will vibrate.

You can now use the new remote to control the motor.

5 Deleting a remote (or channel) from a motor (You have 10 seconds to complete the task)

Method A. This will delete the individual remote (or channel) you are currently using



Press the UP and DOWN buttons simultaneously, then release.


Press the STOP button 7 times.

Press the UP button once, the motor will vibrate

This remote (or channel) has now been deleted from the motor.


WSER Cassette Awning Motors (page2.)

Method B. **WARNING:** This will delete ALL remotes assigned to the motor

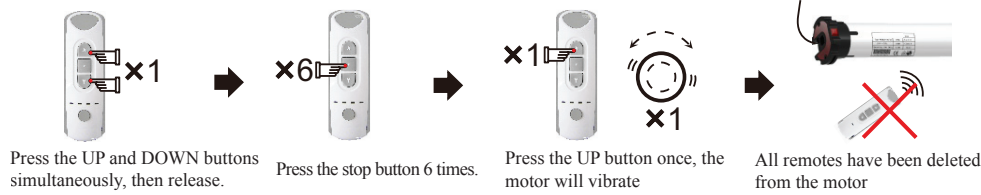


6 Setting the limits (follow steps 1 - 5 below precisely)


01. First delete outer limit (just in case one was set during testing)

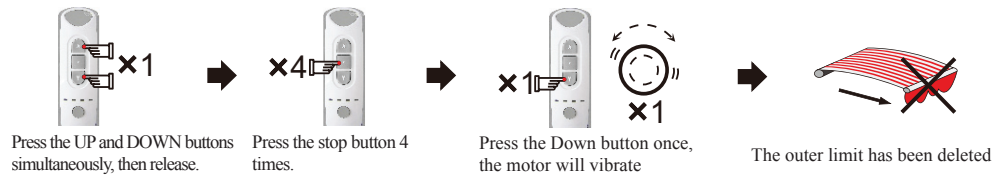


02. Confirm the motors direction - **THE DOWN BUTTON MUST OPEN THE AWNING.**

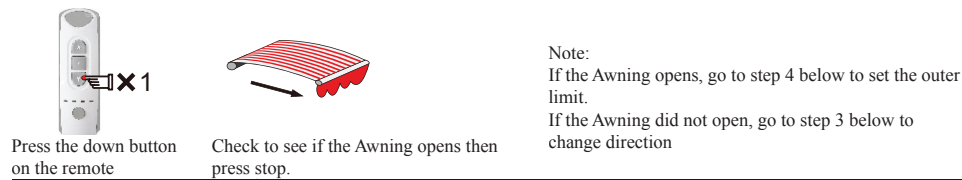

03. Changing the motor's direction (You have 10 seconds to complete the task)

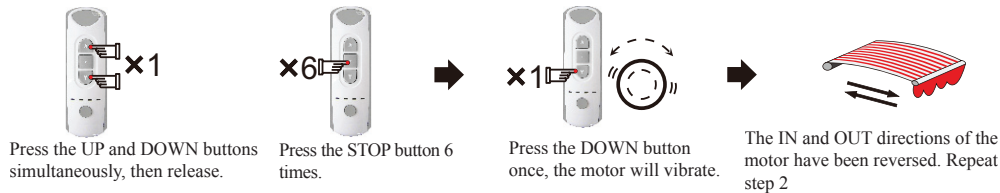


04. Setting the outer limit (You have 10 seconds to complete the task)

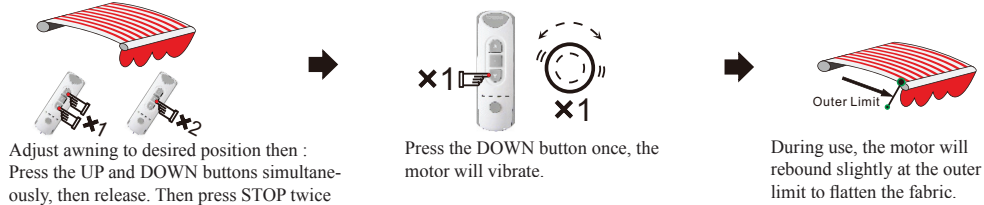

05. Setting the inner limit (for folding arm awnings and cassettes only, otherwise see page 4 for manual instructions)


After the outer limit is set, when closing the awning for the first time allow it to stop on it's own based on tension. The motor will then apply only 25% of the force when it closes in the future, although this is adjustable in step 10

To manually set the inner limit, see page 4.

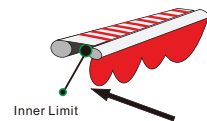

WSER Cassette Awning Motors (Page 3.)

7 Setting the third limit (Mid way position, between inner and outer limits)

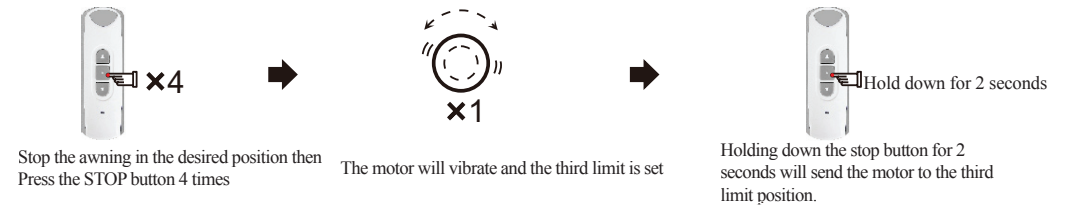


8 Changing the third limit




NOTE: The third limit will be deleted automatically if either the top or bottom limits are deleted.

9 Wind and Light sensor control


1 Activate wind and light sensor control

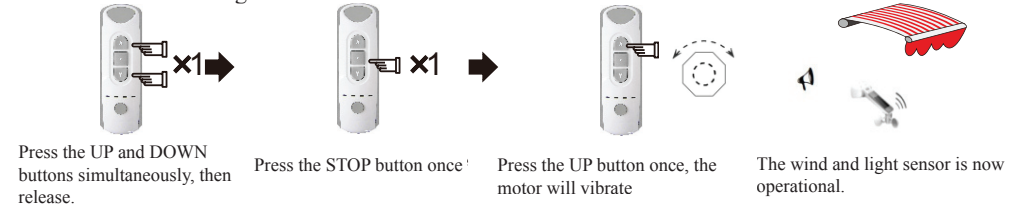

2)1 Deactivate wind and light sensor

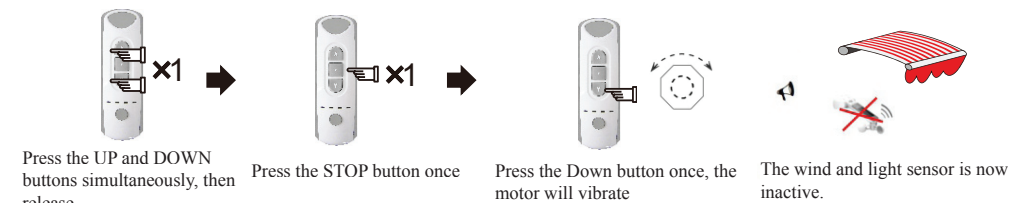

10 Adjusting Torque level used to stop at the inner limit

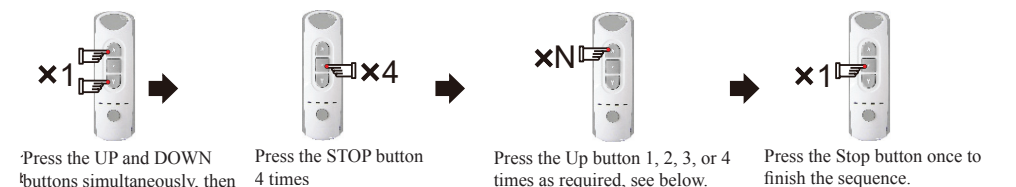

The number of times the UP button (N) is pressed will determine the level of torque applied before the motor will stop at the inner limit. Press once for 25%, twice for 50%, three times for 75% or four times for 100% torque required to stop. (Default is 25%)